

FOREWORD



Dear Friend,

Thank you for choosing the TVS HLX PLUS, strongest and most reliable motorcycle.

As a proud owner of TVS HLX PLUS, you are now part of a family of millions of satisfied TVS customers.

TVS HLX PLUS designed to deliver superior mileage and long-lasting performance. It also comes with refreshing looks.

This manual explains the features and operations of your TVS HLX PLUS. Please read it carefully and follow the instructions to enjoy years of safe riding.

To ensure reliable performance, we urge you to get your TVS HLX PLUS serviced only at TVS Motor Company Authorised Distributor or Dealer / Authorised Service Centers at specified regular intervals.

Happy Riding!

TVS MOTOR COMPANY LIMITED

SAFETY INFORMATION



Operating this vehicle safely is an important responsibility of the rider. To help you make decisions about safety, we have provided operating procedure and other information in this manual. This information alerts you on potential hazards that could hurt you or others. Since it is not possible to warn you about all hazards associated with operating or maintaining the vehicle, you must use your own judgement.

You will find important safety information in following form with corresponding connotations in this manual.

 **Warning**

Disregarding this message might result in injury to the rider.

 **Caution**

This message indicates special procedures or precautions to be followed to avoid damage to the vehicle.

 **Note**

This message provides further clarification for clearer understanding of any particular information.

NOTICE



All information, illustrations, photographs and specifications contained in this owner's manual are based on the latest product information available at the time of this publication. TVS Motor Company Limited may, however incorporate modifications or improvements on its vehicles at any time without notice and therefore, in such events it is possible that the relevant part of the owner's manual does not apply to your vehicle.

Prior permission of TVS Motor Company Limited is required for quoting, copying or reproducing any part of this owner's manual.

Note

Accessories shown in the picture may not be a part of standard equipment.

Running-in information	05
Safe Riding Tips	06
Know your TVS HLX PLUS	09
Riding your TVS HLX PLUS	23
Maintenance	27
Service Record Sheet	40
Technical Specifications	42

RUNNING-IN INFORMATION



The first 1000 km is a crucial part for the life of your TVS HLX PLUS. Proper running-in operation during this period helps in ensuring maximum life and smooth performance of your motorcycle.

The reliability and performance of your TVS HLX PLUS depends on the special care and restraint exercised during the running-in period. It is especially important that you avoid operating the engine in a manner, which could expose the engine parts to excessive stress. Maximum recommended speed during the running-in is:

Maximum 50 kmph speed upto 1000 km (vary the engine speed for better mating of parts).

The first service at 500 ~ 750 km is most important. During running-in period all the engine components and other parts will have set in. All adjustments to be restored, all fasteners to be tightened. Engine cum transmission oil to be replaced. Timely performance of the first service will ensure optimum service life and performance from the engine.

Caution

Replacing the engine cum transmission oil during first service is most important for better life of engine. Always use TVS TRU4 DURALIFE oil (SAE 20W50 API-SL) for better performance and life.

SAFE RIDING TIPS



SAFE RIDING RECOMMENDATIONS

Any two wheeler riding requires some precautions to be taken to ensure the safety of the rider, pillion rider and other road users. These precautions are:

Riding apparel

Loose, fancy clothing can be uncomfortable and unsafe when riding a two-wheeler. Choose good quality two wheeler riding apparel.

Familiarise yourself with new TVS HLX PLUS

Riding skill and your mechanical knowledge form the foundation of safe riding practices. We suggest you to practice riding in a low-traffic condition until you are thoroughly familiar with your vehicle and its controls. Remember practice makes you perfect.

Know your limits

Ride within the boundaries of your own skill at all times. Knowing these limits and staying within them will help you to avoid accidents.

Warning

Two wheeler safety starts with wearing a good quality helmet. One of the most serious injuries that can happen is a head injury. Always wear an good quality helmet that should fit your head comfortably and securely. You should also have good quality goggles to protect your eyes and help your vision.

To prevent or minimize accident, never consume alcohol or drugs before or during the operation of your vehicle. Even minimal consumption of these will affect the rider's ability to control the vehicle.

Posture

Proper vehicle riding starts with proper posture:

1. Keep your elbows inside close to the body and kept flexible.
2. Hold your arms at an angle of about 120°.
3. Hips should be in a position so that arms and shoulders are relaxed.
4. Look widely instead of gazing at one point.
5. Relax to guard against a sudden impact.
6. Hold the tank tightly with knees.
7. Point the toes straight ahead.

Cornering

When cornering, centrifugal force works in a direction perpendicular to the direction in which the vehicle is moving.

Centrifugal force increases in proportion with speed and shorter the radius of the corner, the greater it becomes. During cornering, reduce speeds so as to lessen the effects of centrifugal force. By all means, avoid abrupt application of brakes or sudden steering.

Warning

One-hand riding is dangerous. Keep both hands firmly on the handle bar and both feet securely on the foot rest. Under no circumstances should both the hands be removed from the handle bar, as it is very dangerous.

Warning

Avoid use of mobile phones while riding as it could lead to fatal accident.

Do not downshift the gears in the midst of cornering. Slow down to a safe speed before negotiating a corner. If this is the first time that you are riding a vehicle of this type, we suggest that you practice on a safe, open area to become thoroughly familiar with the operation of the vehicle.

Braking

For safe riding, it is very important to master the braking techniques:

1. Close/release the throttle.
2. Hold the vehicle upright as you apply the brake.
3. Progressive application of brakes is safer.
4. Never depress the clutch lever while braking at higher speeds.
5. Apply both the brakes.
6. Riding down hills and while cornering, close throttle and down shift the gear to take advantage of gearbox and engine which acts as an additional brake. This will avoid the loss of control over the vehicle due to over speed.

SAFE RIDING TIPS



Causes for poor braking:

1. If the brake shoes or drum are worn out or if there is water or oil on them, sufficient friction does not develop and brakes do not work well.
2. Even when the brake works normally, if the road surface is wet or the tyre surface is worn-out, tyres do not take a firm hold on the surface, prolonging the stopping distance.
3. Approximately 60% braking effect is from front brake. Non-usage of front brake causes poor braking.

Warning

As the vehicle speed increases, the stopping distance also increases progressively. Be sure that, you have sufficient distance between you and the vehicle or obstruction ahead of you.

Using only the front or rear brake is dangerous and can cause skidding and loss of control. Apply both the brakes together and with great care on a wet road or other slippery surfaces. Any abrupt braking on slippery or irregular roads can cause loss of rider control.

ACCESSORY INSTALLATION AND SAFETY TIPS

Use extreme caution while selecting and installing the accessories for your TVS HLX PLUS.

The addition of unsuitable accessories can lead to unsafe operating conditions. Your friendly dealer will assist you in selecting quality accessories and installing them correctly.

While selecting the accessories, make sure the accessories should not obstruct lighting, steerability and suspension level.

Additional electrical equipments and controls should not exceed the specified electrical system load of the vehicle.

EMISSION CONTROL

All the TVS motorcycles are tested in the factory for optimum fuel efficiency and lowest possible CO levels. Kindly do not disturb the Carburettor settings as this may lead to higher fuel consumption and also higher CO levels.


If the vehicle needs any adjustments, please consult nearest your TVS Motor Company Authorised Dealer or Authorised Service Centre.

While adequate care is exercised at the factory to ensure that the emissions are within the limits, it is essential for the owner to always maintain TVS HLX PLUS motorcycle in good condition by getting it periodically serviced and checked by TVS Motor Company Authorised Distributor or Dealer / Authorised Service Centre so that the emission and fuel consumption levels are maintained as per norms.

KNOW YOUR TVS HLX PLUS



LOCATION OF PARTS

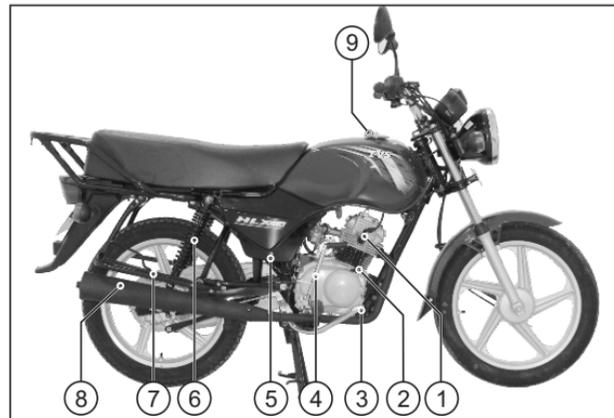



VEHICLE LEFT SIDE

- | | |
|----------------------------|-----------------------|
| 1. Pillion foot rest L | 6. Speedometer cable |
| 2. Rear shock absorber L | 7. Front brake cable |
| 3. Chain inspection window | 8. Lock cover frame L |
| 4. Gear shift lever | 9. Handle pillion |
| 5. Fuel cock | |

VEHICLE RIGHT SIDE

- | | |
|------------------------|--------------------------|
| 1. Spark plug | 6. Rear shock absorber R |
| 2. Gauge oil level | 7. Pillion foot rest R |
| 3. Rear brake pedal | 8. Muffler assembly |
| 4. Kick starter lever | 9. Fuel tank cap |
| 5. Cover frame R screw | |

LOCATION OF PARTS

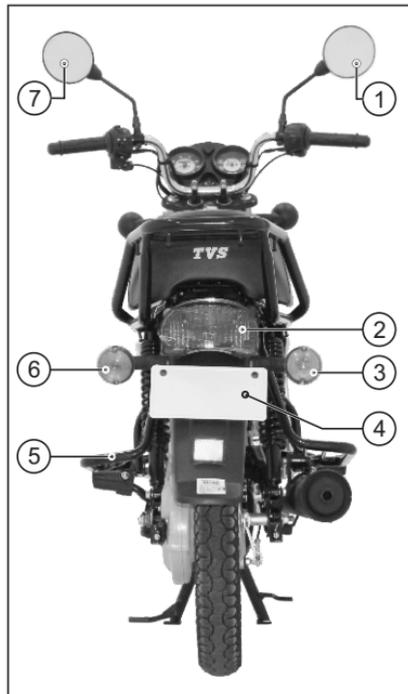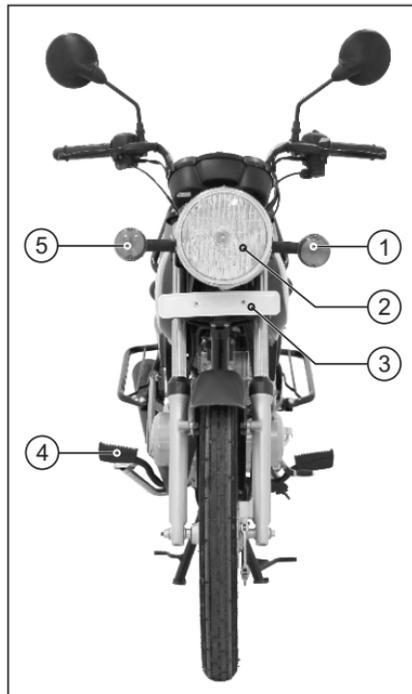

VEHICLE FRONT SIDE

1. Front turn signal lamp L
2. Head lamp assembly
3. Front number plate
4. Rider foot rest
5. Front turn signal lamp R

VEHICLE REAR SIDE

1. Mirror R
2. Tail / brake lamp assembly
3. Rear turn signal lamp R
4. Rear number plate
5. Pillion foot rest L
6. Rear turn signal lamp L
7. Mirror L

KNOW YOUR TVS HLX PLUS



CONTROL KEY

TVS HLX PLUS comes with a pair of identical control keys. These keys are to operate ignition switch cum steering lock, fuel tank cap and cover frame L.

IGNITION SWITCH CUM STEERING LOCK

The ignition switch cum steering lock has three positions:

1. 'OFF' position

All the electrical circuits are turned 'OFF' in this position. Key can be taken out.

2. 'ON' position


Key cannot be removed in this position, you can start the engine and operate turn signal lamp, brake lamp and horn.

3. 'LOCK' position

TVS HLX PLUS steering can be locked in both left and right directions.

To lock the steering, turn the handle bar all the way to the left or right. Insert the key into the lock, push in, hold and turn it to 'LOCK' position. Take out the key once the steering is locked.

Turning the key to 'OFF' or 'ON' position unlocks the steering.

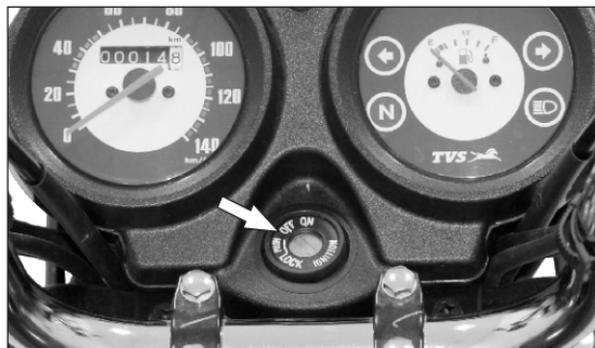

Caution

Leaving the key in 'ON' position will drain the battery when vehicle is not in use. So "Switch off" and take the key out when the vehicle is not in use.

Warning

Never attempt to move the vehicle when the steering is locked, you may lose the balance.

SPEEDOMETER ASSEMBLY

1. Speedometer

Indicates the road speed in kilometers per hour.


2. Odometer

Registers the total distance covered by the vehicle in kilometers.

Last digit of the odometer denotes one tenth of a kilometer.

3. Turn signal indicator left

When the turn signal lamp switch knob is pushed to the left side (←), the left side turn signal indicator lamp flashes.

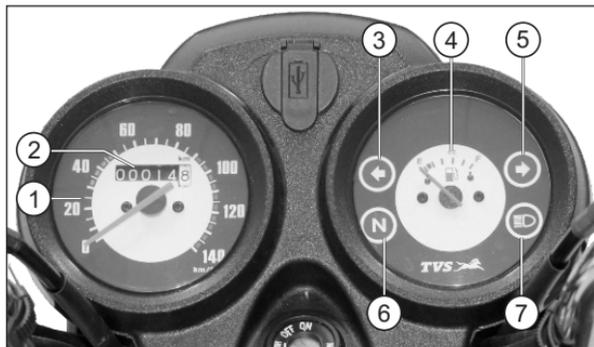

4. Fuel gauge

Fuel gauge indicates the approximate quantity of fuel available in the fuel tank.

5. Turn signal indicator right

When the turn signal lamp switch knob is pushed to the right side (→), the right side turn signal indicator lamp flashes.

6. Neutral indicator (N)

The green lamp glows when the vehicle is in neutral condition and the ignition key is in 'ON' position. This lamp will not glow when the vehicle is in gear.

7. High beam indicator

When the head lamp high beam is 'ON', a blue indicator () glows.

HANDLE BAR LEFT SIDE FOR ES & KS MODELS

1. Choke lever for ES & KS

Choke is required for starting a cold engine.

Choke lever is provided on the left side of handle bar. Pull the lever to the extreme left to switch 'ON' the choke. Once the vehicle is started and engine is running at stable speed, release the lever to its original position.

2. Horn button for ES & KS

Press the knob '  ' to operate the horn.

KNOW YOUR TVS HLX PLUS



Handle bar left side for ES model

3. Turn signal lamp switch for ES & KS


When the turn signal lamp switch knob is pushed to the left side (←) or right side (→), the turn signal lamps flashes along with the indicator.

4. Clutch lever for ES & KS

Use clutch lever to disengage the drive to the rear wheel while shifting the gears. Pressing the lever disengages the drive.

5. Pass by switch for ES & KS

The head lamp high beam glows when the pass by switch knob (PASS) is pressed.

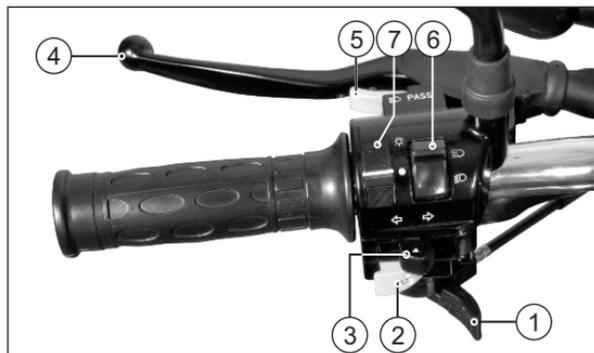

Handle bar left side for KS model

Press the knob intermittently while overtaking another vehicle during day time to give signal to the opposite vehicles.

6. Head lamp high/low beam switch for ES & KS

Press the knob towards '☰' to operate the head lamp high beam.

Press the knob towards '☷' to operate the head lamp low beam.

i Note

ES - Electric Starter.
KS - Kick Starter.

7. Head lamp switch for KS

Head lamp switch has two positions '●' and '☀' to control head lamp.

Off: Head lamp, speedometer lamps and tail lamp are 'OFF' when the knob is positioned at '●'.

On: Head lamp, speedometer lamps and tail lamp glows when the knob is positioned at '☀' and engine is running.

Caution

Always use choke for cold starting.

Never open the throttle when the choke is applied, it may lead to flooding of engine and difficulty in starting.

Warning

Always use the appropriate turn signal lamp when you intend to change lanes or take turns. Be sure to switch 'OFF' the lamp after negotiating the lanes or turns.

Use appropriate head lamp high/low beam as per the traffic and road conditions for your safety and to avoid inconvenience to the opposite riders.

HANDLE BAR RIGHT SIDE FOR ES & KS MODELS

1. Electric Starter Switch for ES


Press the switch to start the engine electrically even when the vehicle is in any gear.

2. Head lamp switch for ES

Head lamp switch has two positions '●' and '☀' to control head lamp.

Off: Head lamp, speedometer lamps and tail lamp are 'OFF' when the knob is positioned at '●'.

On: Head lamp, speedometer lamps and tail lamp glows when the knob is positioned at '☀' and engine is running.

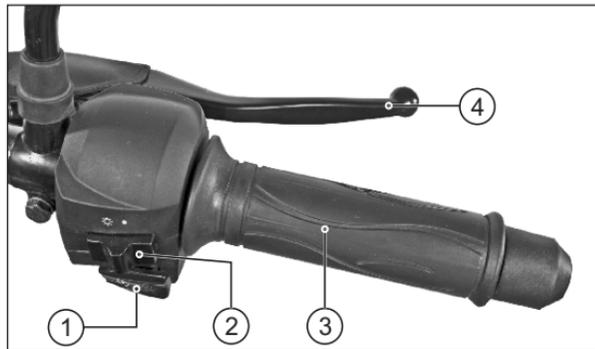

Handle bar right side for ES model

KNOW YOUR TVS HLX PLUS




3. Throttle grip for ES & KS

Engine speed is controlled by the rotation of the throttle grip. Twist it towards you to increase the engine speed. Twist it away from you or release it to decrease the engine speed.

4. Front brake lever ES & KS

The front brake is applied by pressing the front brake lever gently towards the throttle grip. Brake lamp also glows on application of brake.

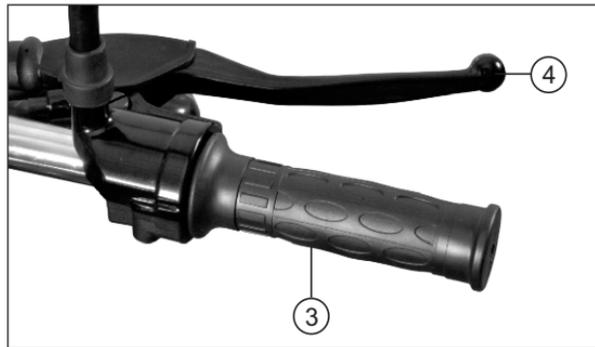

Handle bar right side for KS model

i Note

ES - Electric Starter.
KS - Kick Starter.

FUEL TANK CAP

To open the fuel tank cap, move away the protection lid (A) from its position. Insert the key into the lock and turn it in clockwise. The tank cap ejects automatically. Take out the cap along with the key.

To close, press the cap back to its original position by keeping the front end (arrow marked) towards handle bar. Take out the key and close the production lid.



⚠ Warning

Avoid spilling of fuel on the hot engine. Never refill fuel near open flame. Do not smoke while refueling. Do not use cell phones while refueling.

Caution

Whenever refueling the bike, fill upto the bottom of neck portion of the fuel tank. Filling above the neck may result in improper breathing of fuel tank.

FUEL COCK

Fuel cock has the following three positions:

ON: Fuel flows in this position when the fuel is above the reserve level in the tank.


RES: Turn the fuel cock lever to this position when the fuel stops flowing in 'ON' position.

OFF: Fuel flow cuts off from the tank to carburettor.

While riding with fuel cock lever in 'ON' position and if the fuel in the tank reaches reserve level, you may experience engine sluggishness and jerky feeling. Take the vehicle to the left side of the road while taking care of traffic and change the fuel cock lever position to 'RES'.

Caution

Do not position the fuel cock lever in between 'ON' and 'OFF' position as this may drain off entire fuel while riding the vehicle.

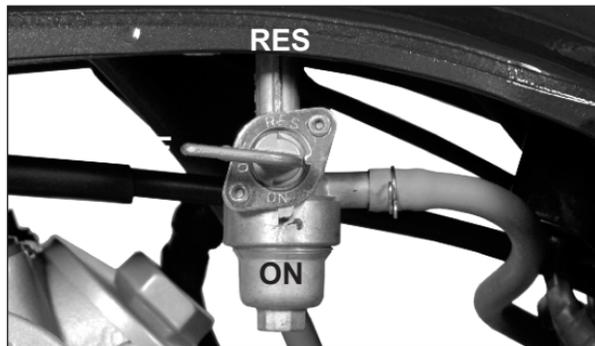


Note

It is good practice to turn the fuel cock lever to "OFF" position, when the engine is not running.

KICKSTARTER LEVER

The kickstarter lever is located on the right side of the engine. The engine can be started by kicking the lever while the ignition key is in 'ON' position and keeping the transmission in neutral.

KNOW YOUR TVS HLX PLUS

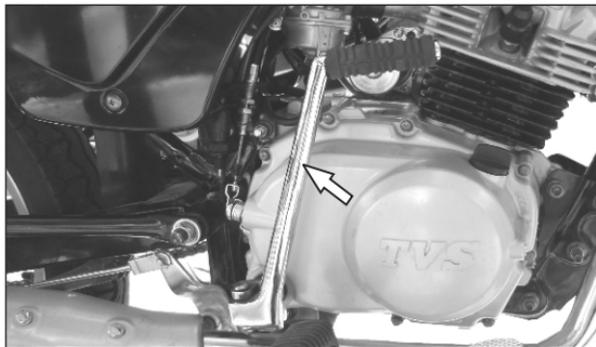

⚠ Warning


It is recommended always to start the vehicle keeping the gear in neutral position.

GEAR SHIFT LEVER

Gear shift lever is located on the left side of the vehicle.


ALL GEAR UP (except Nigeria): Shifting into the higher gears from neutral position is accomplished by depressing the clutch lever and pressing the rear end of shifting lever by heel and down shifting to lower gears by pressing the front end of the lever by toe once for each gear.

ALL GEAR DOWN (exclusively for Nigeria): Shifting into the higher gears from neutral position is accomplished by depressing the clutch lever and pressing the front end of shifting lever by toe and down shifting to lower gears by pressing the rear end of the lever by heel once for each gear.

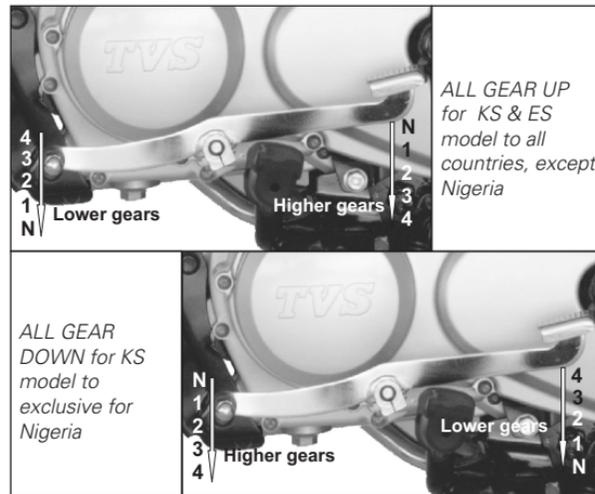

REAR BRAKE PEDAL

Rear brake pedal is located on the right side of the vehicle. Press the rear brake pedal with your right foot to apply the rear brake. The brake lamp glows on application of brake.

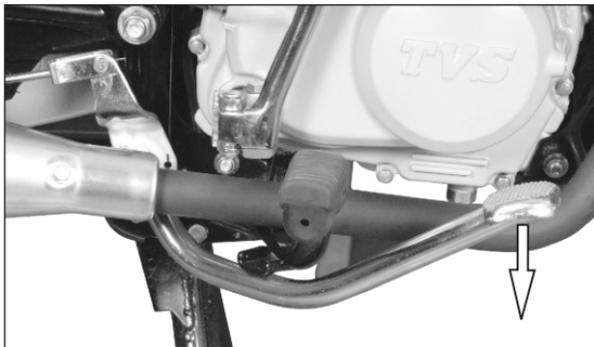


Warning

Brakes are items of personal safety and should always be maintained in proper condition.

CENTRE STAND AND SIDE STAND

TVS HLX PLUS is equipped with centre and side stand. To place the vehicle on the centre stand (1), hold the handle bar left grip with left hand and pillion handle with right hand. Place your foot firmly on the centre stand extension (1a) and press down with adequate effort. Ensure both the legs of centre stand are touching ground before placing the vehicle on the stand.

Side stand (2) can be operated with your foot by pushing it away from the vehicle till it stops.

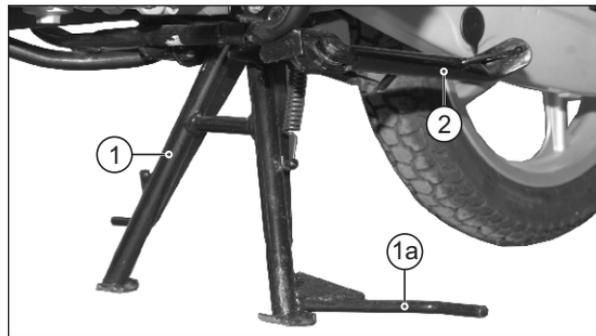

Warning

Always release side stand to its full up position before putting the vehicle in motion.

KNOW YOUR TVS HLX PLUS



⚠ Caution

Never sit on the vehicle when it is supported by side stand. Always park the vehicle on a flat, firm surface.

COVER FRAME L

TVS HLX PLUS is provided with lockable cover frame on the left side. Open the cover frame to access tool kit, first aid kit and battery assembly.

1. Insert the key in the cover frame at lock (1) and rotate it in clockwise direction.
2. Pull out the cover frame gently at (2), slide it forward at (3) and take out.



Reassembly

1. Assemble the cover frame by carefully sliding the rear portion (3) on to the hook on the frame while ensuring the availability of rubber cushion on the hook.
2. Locate its lug (2) on the hole provided in the fuel tank while ensuring the availability of rubber cushion on the hole, gently press and lock with the key by rotating in anti-clockwise direction.

⚠ Caution

While reassembling the cover frames, ensure that the rubber cushions provided for the cover lugs are in place.

COVER FRAME R

Cover frame R can be removed by removing the mounting screw. Follow the procedure of cover frame L for removal and reassembly.

TOOL KIT

To assist you in performing certain aspects of maintenance and emergency repairs, a tool kit is supplied along with the vehicle and is located below the cover frame L.

Remove the cover frame L as explained earlier.

The tool kit consists one number each of the following:

1. 16 mm box spanner
2. 14x17 mm open end spanner
3. 10x12 mm open end spanner
4. Combination screw driver bit
5. Screw driver handle
6. Tool bag

Caution

It is recommended to use the tool kit in case of emergency only. It is always advisable to take your vehicle to TVS Motor Company Authorised Distributor or Dealer/Authorised Service Centre.

SMART PHONE CHARGERS

An all new smart phone charging port has been provided above the speedometer assembly of your vehicle.

Please follow the guidelines provided for using it properly:

DO'S

1. Ensure that no water enters into the unit, by closing the USB flap properly.
2. Use only mobile phone company's authorized USB cable for mobile charging.
3. Ensure the flap is not damaged while opening/ inserting the USB cable.


DON'T'S

1. Do not leave the USB charging flap open/partially closed when not in use.
2. Do not attempt to use/charge any other device, other than one mobile phone at a given time.
3. Do not try to force the USB connector in, check if it is inserted in the appropriate direction, to prevent damage.
4. Do not charge your mobile when engine is off.
5. Do not use other device, this port is for charging mobile phones only.

KNOW YOUR TVS HLX PLUS

The charging time of the mobile may vary, depending on the mobile battery's state of charge.

The flap in the unit has been designed to prevent water entry and is not replaceable.

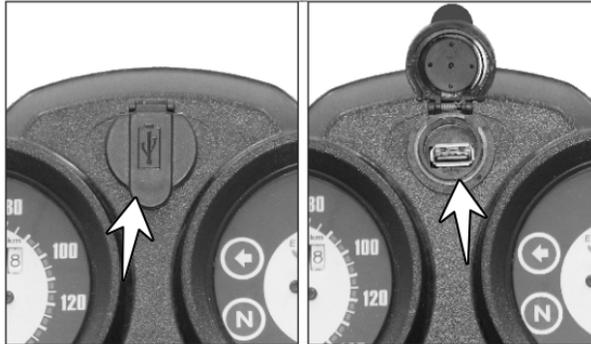

Caution

TVS is not responsible for any damage to mobile phones in the event of fall while charging during vehicle moving.

Inspection before riding

Check the following items before riding.

ITEM	WHAT TO CHECK FOR
Engine cum Transmission oil	Availability of oil upto the level. (page no. 34)
Fuel	Enough fuel for the planned distance of running.
Tyres	Correct pressure. (Page no. 38) Adequate tread depth / no cracks or cuts.
Battery	Proper working of horn, brake lamp, turn signal lamps and neutral lamp. Electrolyte level. (page no. 33)
Lighting	Head lamp high/low beam, turn signal lamps, speedo lamps and tail lamp.
Steering	Smooth movement / no play or looseness
Throttle	Correct free play of cable / smooth operation
Clutch	Correct free play of cable. (page no. 35) Smooth and progressive action.
Brakes	Correct lever and pedal play. (page no. 36)
Wheels	Free rotation.

RIDING YOUR TVS HLX PLUS



Starting the engine

Turn the fuel cock lever to the 'ON' or 'RESERVE' position based on availability of fuel in fuel tank. Insert control key into the ignition switch cum steering lock and turn it to 'ON' position. Make sure that the transmission is in neutral position press the electric starter switch to start the engine electrically or kick start the engine.

When the engine is cold

- ⇒ Pull the choke lever towards extreme left and start the engine. Allow the engine to idle in choke applied condition.
- ⇒ Once the engine is warm, release the choke lever to its original position.



Warning

Do not run the engine indoors where little or no ventilation available. Exhaust gas is extremely poisonous.



Caution

Do not keep the engine in idling rpm for long and do not open excessive throttle when engine is idling, it leads to overheating of the engine and damage to internal components.

Setting the vehicle in motion

Depress the clutch lever and engage first gear by pressing the rear end of the gearshift lever downward by heel. Twist the throttle grip towards you and simultaneously release the clutch lever gently and gradually.

The vehicle will start moving forward. As the vehicle picks up speed, shift to the next higher gear by closing the throttle, pulling the clutch lever in and pressing the rear end of the gear shift lever downwards once again. Release the clutch lever and open the throttle again. Select the required gears in similar manner.

Using the transmission

The transmission is provided to keep the engine run smoothly in its normal operating speed range. The gear ratios have been carefully chosen to meet the characteristics of the engine. The rider should always select the most suitable gear to achieve the necessary speed and pulling power smoothly.

Riding on hills / gradients

When climbing steep hills, the motorcycle may begin to slow down and show lack of power. At this point you should shift to a lower gear so that the engine will again be operating in its normal power range. Shift gears rapidly to prevent the motorcycle from losing momentum.

When riding down a hill, the engine may be used as braking

by shifting to a lower gear.

Stopping and parking

1. Close the throttle completely and apply both brakes simultaneously.
2. Down shift the gears as road speed decreases. Bring the engine to neutral position just before the vehicle stops.
3. Turn the ignition 'OFF'.
4. Park the vehicle on a firm, flat surface.
5. Lock the steering and turn fuel cock to 'OFF' position.

Warning

Reduce speed to a safe limit before turning / cornering. It is not advisable to apply brakes while turning / cornering. Do not disengage the clutch while braking.

FUEL RECOMMENDATION

Use unleaded petrol only.

The petrol should be 85 to 95 octane by research method. Use recommended fuel additives for longer life of engine components and lower maintenance.

Caution

Never mix oil in petrol in the fuel tank.

Note

Use fuel additives in petrol as recommended by the respective manufacturer for low carbon deposition.

CHECKS AND TIPS FOR IMPROVING FUEL ECONOMY REGULAR CHECKS

Carry out the periodic maintenance checks as specified in this manual. (page no. 24 to 28)

Regular maintenance checks will save fuel and assure you of trouble-free, enjoyable and safe riding besides keeping environment clean.

Spark plug

A dirty or defective spark plug leads to wastage of fuel due to incomplete combustion. Check, clean and readjust the gap periodically.

Air cleaner element

A dirty air cleaner restricts airflow, increases fuel consumption. Clean or replace the air cleaner elements periodically.

Clutch

Increase of engine rpm during acceleration, without increasing the road speed indicates clutch slip. A slipping clutch will cause high fuel consumption.

RIDING YOUR TVS HLX PLUS



If the condition persists even after adjusting the clutch lever play, immediately have the clutch checked by TVS Motor Company Authorised Distributor or Dealer / Authorised Service Centre.

Engine cum transmission oil

Dirty or less engine cum transmission oil will increase friction between various parts of the engine and reduce engine life, thereby increase fuel consumption.

Regularly check the oil for contamination and level. It should be between the minimum and maximum level on the gauge. Get it replaced at regular intervals as per maintenance schedule.



Caution

Replace the sparkplug every 12000 km for better performance of the vehicle.

Never drive the vehicle with half clutch. This will reduce the life of clutch and affect the performance of the vehicle and fuel economy.

Fuel leak

Check and arrest fuel leaks if any from tank, carburettor and fuel lines.

Tyres

Low tyre pressure has the same adverse effect on a vehicle as of loading the vehicle heavily. The drag on the vehicle will be increased resulting decreased fuel economy.

Further more, handling may be adversely affected. Check the tyre pressure regularly and inflate it to the recommended pressure. Never use tyres, which are worn beyond the permissible limit.

Fast starting from rest wastes fuel

A racing start from rest at full throttle can waste fuel and damage the engine. It also creates a potentially dangerous traffic situation.

Fast acceleration wastes fuel

Fuel is wasted whenever you suddenly accelerate or apply brake.

Avoid unnecessary idling

While waiting for someone or stopping in signals for long time, if the engine is kept running at idle speed, it causes unnecessary wastage of fuel.

Avoid frequent braking

Anticipate corners and slopes as well as the traffic conditions. Unnecessary, frequent braking will reduce the fuel economy.

MAINTENANCE SCHEDULE

The maintenance schedule indicates the intervals between periodic services. At the end of each interval, be sure to inspect, check, replace, adjust, lubricate and service as instructed. If the maintenance is not done periodically, it will result in rapid wear and severe damage to the vehicle. If the vehicle is used under high stress conditions such as continuous full throttle operation or is operated in dusty climate, certain jobs should be performed more often to ensure reliability of the vehicle. Cylinder head, steering components, suspension, chain and wheel components etc., are key items and require very special and careful servicing. TVS Motor Company Limited strongly recommends that the jobs as per the maintenance schedule be performed by TVS Motor Company Authorised Distributor or Dealer / Authorised Service Centre.

Periodic inspections may reveal one or more parts that may need replacement. Whenever replacing parts on TVS HLX PLUS, it is recommended that you use only the TVS Motor Company Genuine parts.

Caution

Proper running-in and maintenance are mandatory for making certain that your vehicle is reliable and gives optimum performance at all times. Be sure that the periodic maintenance is performed thoroughly in accordance with the instructions given in this owner's manual.

MAINTENANCE

PERIODIC MAINTENANCE SCHEDULE (months or km whichever occurs earlier)

Period Km	PERIODIC SERVICES				
	1 month 500 - 750	3 months 2500 - 3000	6 months 5000 - 6000	9 months 8500 - 9000	12 months 11500 - 12000
Engine cum transmission oil	R	R	R	R	R
Oil filter	C	C	C	C	C
Centrifugal filter	C	-	C	-	C
Spark plug	C & A	C & A	C & A	C & A	R
Compression pressure	-	-	I	-	I
Air cleaner elements	I & C	I & C	I & C	I & C	I & C
Engine breather pipe	-	C	C	C	C
Carburettor assembly ²	-	C & A	C & A	C & A	C & A
Tappet clearance ²	I & A	I & A	I & A	I & A	I & A
Fuel cock sediment bowl	C	C	C	C	C
Hose fuel ³	Replace every three years				
Clutch cable	I & A	I & A	I & A	I & A	I & A
Throttle cable	-	I & A	I & A	I & A	I & A
Steering play ²	I & A	I & A	I & A	I & A	I & A
All fasteners ²	I & TI	I & TI	I & TI	I & TI	I & TI

MAINTENANCE



Period Km	PERIODIC SERVICES				
	1 month 500 - 750	3 months 2500 - 3000	6 months 5000 - 6000	9 months 8500 - 9000	12 months 11500 - 12000
Drive chain ³	C, A & L	C, A & L	C, A & L	C, A & L	C, A & L
All bulbs and horn	I	I	I	I	I
Head lamp beam	I & A	I & A	I & A	I & A	I & A
Battery electrolyte level	I & T	I & T	I & T	I & T	I & T
Specific gravity and voltage ⁵	I	I	I	I	I
Brakes	I & A	I & A	I & A	I & A	I & A
Tyres (air pressure)	I & A	I & A	I & A	I & A	I & A
Idling CO% ⁶	I & S	I & S	I & S	I & S	I & S

R - Replace; I - Inspect; T - Top up; C - Clean; A - Adjust; TI - Tighten; L - Lubricate; S - Set; D - Decarbonise

² If necessary

³ Replace if necessary

⁴ Inspect for leak

⁵ Recharge if necessary

⁶ Idling CO% should be set with the help of exhaust gas analyser and tachometer only

MAINTENANCE

PERIODIC MAINTENANCE SCHEDULE (months or km whichever occurs earlier)

Period Km	PERIODIC SERVICES					
	15 months 14500-15000	18 months 17500-18000	21 months 20500-21000	24 months 23500-24000	27 months 26500-27000	30 months 29500-30000
Engine cum transmission oil	R	R	R	R	R	R
Oil filter	C	C	C	C	C	C
Centrifugal filter	–	C	–	C	–	C
Spark plug	C & A	C & A	C & A	R	C & A	C & A
Compression pressure	–	I	I	I	I	I
Air cleaner elements	I & C	I & C	R	I & C	I & C	I & C
Engine breather pipe	C	C	C	C	C	C
Carburettor assembly ²	C & A	C & A	C & A	C & A	C & A	C & A
Tappet clearance ²	I & A	I & A	I & A	I & A	I & A	I & A
Head cylinder / piston ²	–	D	–	–	–	–
Fuel cock sediment bowl	C	C	C	C	C	C
Hose fuel ³	Replace every three years					
Clutch cable	I & A	I & A	I & A	I & A	I & A	I & A
Throttle cable	I & A	I & A	I & A	I & A	I & A	I & A
Steering play ²	I & A	I & A	I & A	I & A	I & A	I & A

MAINTENANCE



Period Km	PERIODIC SERVICES					
	15 months 14500-15000	18 months 17500-18000	21 months 20500-21000	24 months 23500-24000	27 months 26500-27000	30 months 29500-30000
Front fork oil ⁴	–	R	–	–	–	–
All fasteners ²	I & TI					
Drive chain ³	C, A & L					
All bulbs and horn	I	I	I	I	I	I
Head lamp beam	I & A	I & A	I & A	I & A	I & A	I & A
Battery electrolyte level	I & T	I & T	I & T	I & T	I & T	I & T
Specific gravity and voltage ⁵	I	I	I	I	I	I
Brakes	I & A	I & A	I & A	I & A	I & A	I & A
Tyres (air pressure)	I & A	I & A	I & A	I & A	I & A	I & A
Idling CO% ⁶	I & S	I & S	I & S	I & S	I & S	I & S

R - Replace; I - Inspect; T - Top up; C - Clean; A - Adjust; TI - Tighten; L - Lubricate; S - Set; D - Decarbonise

² If necessary

³ Replace if necessary

⁴ Inspect for leak

⁵ Recharge if necessary

⁶ Idling CO% should be set with the help of exhaust gas analyser and tachometer only

It is recommended that maintenance services are done in similar intervals above 30000 km also for good performance of your vehicle.

MAINTENANCE



LUBRICATION SCHEDULE

Item	Interval	Initial 500 - 750 km	Every 2500 - 3000 km	Every 5000 - 6000 km	Every 8500 -9000 km
Throttle grip		-	-	-	Grease
Speedometer gear		-	-	-	Grease
Speedometer cable		-	-	-	Grease
Brake cam		-	-	Grease	-
Drive chain		SPRAY	SPRAY	-	-
Brake pedal shaft		Grease	Grease	-	-
Kick starter pedal pivot		4T oil	4T oil	-	-
Steering stem bearings	 Clean and lubricate with fresh grease every 12000 km			
Swing arm shaft	 Grease every 2 years			
Front brake and throttle cables	 Lubricate at ends using grease in all services			

RECOMMENDED LUBRICANTS

Application	Qty	Manufacturer	Brand
Engine cum transmission oil	900 ml (after draining) 1000 ml (after disassembly)	TVS Motor Company	TVS TRU4 DURALIFE oil (SAE 20W50 API-SL, JASO MA2)
Front fork oil	145 ± 2.5 ml / leg	-	Teleshockab oil
Grease	-	Bechem	Bechem premium

SELF - MAINTENANCE PROCEDURES BATTERY

Battery is located below the cover frame L. Check the electrolyte level of the battery. It should be between the maximum and minimum level. If the electrolyte level is below the minimum level, add only distilled water upto the maximum level by removing the filler caps.

Clean the battery thoroughly, apply petroleum jelly to the battery terminals to prevent them from corrosion.

While connecting the terminals, observe the correct polarity. Connect the red wire to the ' + ' positive terminal and black wire to the ' - ' negative terminal of the battery.



Caution

Once the battery is charged initially, never add diluted sulphuric acid. Use only distilled water for topping up. Never add tap water. Do not pull battery by its wires while removing. Never check the battery charge by shorting the terminals.

Always connect the positive terminal first and then negative to avoid sparking.

Do not obstruct, bend or change the routing of the air vent tube of battery. Make sure that the vent tube is firmly attached to the battery and the other end is open and clear.

FUSE REPLACEMENT

The fuse case fitted on the battery band contains a 10 A fuse. If the fuse is blown off, turn the ignition switch to 'OFF' position. Open the fuse case and replace the fuse (extra fuse is provided inside the fuse case itself). Turn 'ON' the ignition switch and check for all the battery operated electrical items. In case the fuse blows off again, consult the nearest TVS Motor Company Authorised Distributor or Dealer / Authorised Service Centre.

Caution

Do not use vehicle by shorting the wires, without a fuse. This may result in overheating of electricals / wiring and may result in fire. Do not use fuse of higher amperage for the safety of electrical system.

MAINTENANCE




SPARK PLUG

A spark plug with heavy carbon deposits will not produce strong sparks. Hence, as per schedule or, as and when necessary, clean the carbon deposits from the spark plug with a small wire brush or a spark plug cleaning tool.

Readjust the spark plug gap to 0.6 ~ 0.8 mm using a feeler gauge / wire gauge. Replace the spark plug every 12000 km. The carbon deposits on the porcelain tip and its colour tells you whether the combustion of the engine is good or not.

If the colour of tip is white or glazed, dry black or wet black then have the vehicle checked by TVS Motor Company Authorised Distributor or Dealer / Authorised Service Centre.

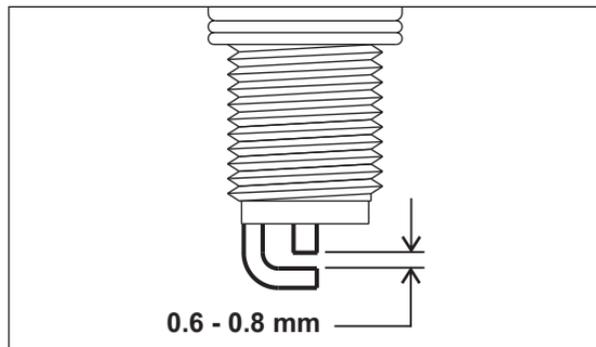

Tip colour	Condition of engine
Light brown	Good combustion
White or Glazed	Hot engine / Lean burn
Dry or wet black	Rich mixture / High carbon deposition

Spark plug removal

1. Pullout the suppressor cap from the spark plug.
2. Using the spark plug spanner remove the spark plug.

Caution

Always use only recommended make and type of spark plug.

It is advisable to tighten the spark plug by hand till the end and then tighten with the spark plug spanner. Do not over tighten or cross thread the spark plug.


Cover the spark plug hole with cloth when the plug is removed, to prevent dust/water entry.

ENGINE CUM TRANSMISSION OIL

Checking the oil level

Check the engine cum transmission oil level periodically.

1. Place the vehicle on centre stand on a flat surface. Remove the gauge oil level, wipe it clean and insert the gauge oil in its hole without threading in.
2. Check the oil level. The oil level should be between the minimum and maximum level markings as shown in the figure. If the oil is less than the minimum level, add recommended oil upto the maximum level mark.

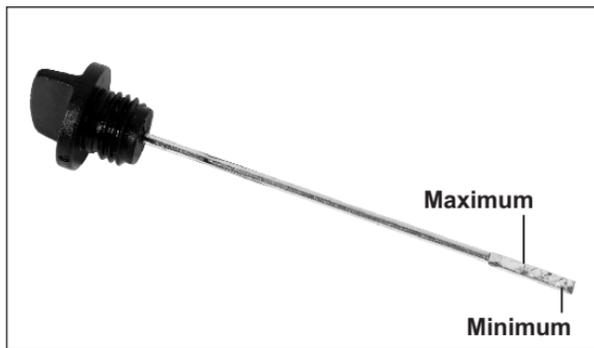

Caution

If the vehicle is driven with less engine cum transmission oil, engine components will be severely damaged. Check the oil level before starting to avoid costly damage. Always use recommended oil only.

CLUTCH ADJUSTMENT

Clutch lever free play is one of the most important adjustments, which you may need to check in between services for better life of the clutch plates.

The free play of the clutch should be 10 - 15 mm, as measured at the clutch lever end, before the clutch begins to disengage.

Adjust the clutch lever free play periodically by means of clutch cable adjuster at arm clutch release.

If you find the play is more or less, adjust in the following way:

1. Ensure that the engine is cold.
2. Loosen the lock nut (2) holding the clutch cable adjuster (3) adjust the clutch cable adjusting nut (1) 'in' or 'out' to give sufficient play in the clutch cable.
3. After adjusting the play, holding the adjuster nut in the same position lock the lock nut.



Caution

Too much or too less clutch lever free play will damage the clutch plates, thereby affecting the performance of the vehicle. clutch lever free play should be adjusted only when the engine is cold.


MAINTENANCE



REAR SHOCK ABSORBERS

TVS HLX PLUS is provided with 5 step adjustable rear shock absorbers to meet different road and load conditions. There are 5 notches for adjusting spring load. If the spring is adjusted to the minimum notch, then the shock absorber will be softer which is good for plain smooth roads and light loads. If the spring is adjusted to maximum notch, then it will be stiffer which is good for rough, bumpy roads and heavy loads.


Adjust the spring load by shifting the adjuster to the required notch according to the different load and road conditions. The more you compress the shock absorber spring, the more it becomes stiff.

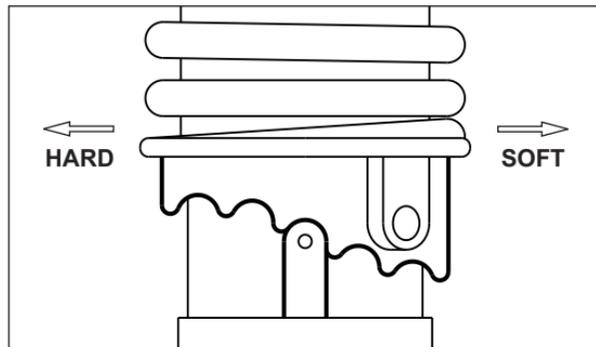

BRAKES

Front brake

1. Measure the free play of the front brake lever at the lever end. The distance measured should be 15 ~ 20 mm or as required.
2. If the measured distance is more than the limit then, adjust the adjuster nut provided at the front wheel end to obtain the correct play.
3. Turn the adjuster nut in clockwise direction for reducing the free play or in anti-clockwise direction for increasing the free play of the front brake lever.

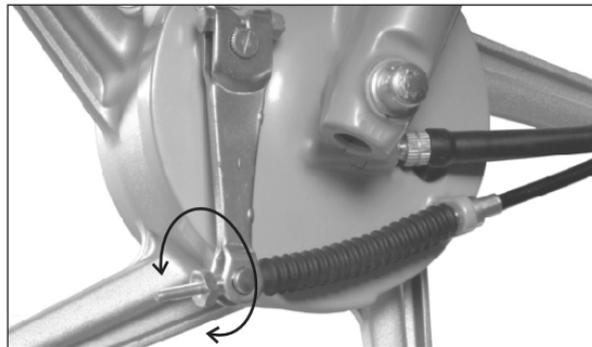

MAINTENANCE



Warning

Avoid using front brake while cornering. Brakes are items of personal safety and should always be maintained in proper condition.

Rear brake

The travel of brake pedal can be adjusted by turning the rear brake adjusting nut 'in' or 'out'. Adjust the free travel of pedal to 15~20 mm.



Warning

Check the brake pedal play periodically. However the brake play needs to be adjusted more frequently depending upon the usage.



Brake shoe wear indicator

When the brake is applied, the index mark (1) on the cam brake should be within the range on the wear limit indicator (2) on the front and rear brake panel assembly. In case of the mark going beyond, consult the nearest Authorised TVS Motor Company Authorised Distributor or Dealer / Authorised Service Centre.

Caution

Replace the brake shoes, if the wear indicator shows beyond the wear limit.


TYRES
Tyre pressure:



Check tyre pressure atleast once in a week if not more frequently. Insufficient air pressure in the tyres not only hasten tyre wear, but also seriously affects the stability of the vehicle.

Under inflated tyres make smooth cornering difficult and over inflated tyres decrease the tyre contact with the ground which can lead to skidding and loss of control. Be sure that the tyre pressure is within the specified limits at all times.

	Solo	Pillion
Front	1.75 kg/cm ² (25 PSI)	1.75 kg/cm ² (25 PSI)
Rear	2.00 kg/cm ² (28 PSI)	2.25 kg/cm ² (32 PSI)

FRONT WHEEL REMOVAL

1. Remove axle nut (1) along with a washer from front wheel axle.
2. Pull out the axle (2) along with a washer from wheel assembly.
3. Remove a spacer from right side of the wheel.
4. Place a support (wooden block) below the frame to prevent the vehicle from falling.
4. Lift the front fork assembly up, dislocate the brake panel along with cables and slide the wheel out.
5. Reverse the procedure for reassembling. Locate the lug on fork leg L to the slot in the brake panel while reassembling.

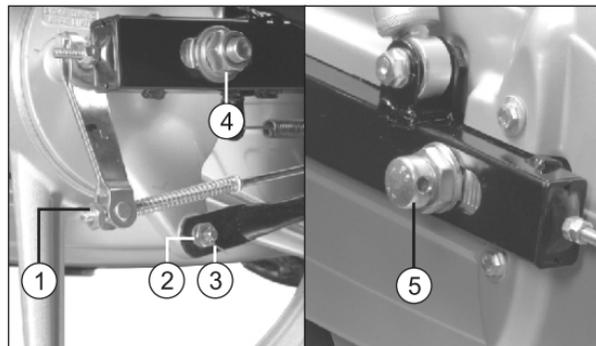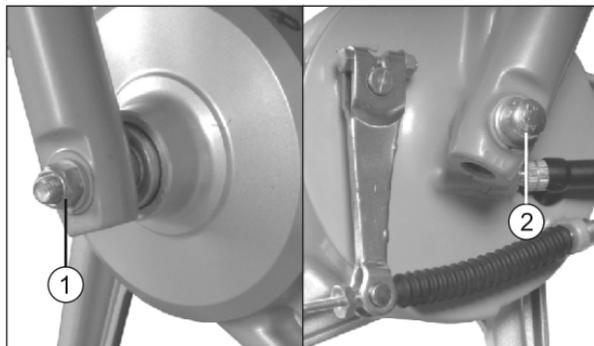

REAR WHEEL REMOVAL

1. Remove the rear brake adjuster (1) and disconnect the brake rod.
2. Remove the split pin (2) and the nut (3) from torque link mounting with the brake panel and disconnect the torque link.
3. Remove the axle nut (4). Pull out the axle (5).
4. Tilt the vehicle to the left and take out the wheel assembly along with the brake panel assembly.
5. For locating and reassembling the rear wheel easily, engage gear. This will arrest the free movement of the drum sprocket.

6. Reverse the procedure for reassembly.

Warning

Always make sure that whenever the wheel is removed, axle nut is properly retightened to the specified torque and chain slackness is adjusted to the specified limit.

Once the split pins are removed, replace them with new ones.

SERVICE RECORD SHEET

Sl.No.	Description	Odometer reading	Job card no. / Date	Servicing Dealer's stamp and sign.
1	1st service between (a) 500 - 750 km or (b) 1 month from the date of purchase, whichever of the two occurs earlier.			
2	2nd service between (a) 2500 - 3000 km or (b) 3 months from the date of purchase, whichever of the two occurs earlier.			
3	3rd service between (a) 5000 - 6000 km or (b) 6 months from the date of purchase, whichever of the two occurs earlier.			
4	4th service between (a) 8500 - 9000 km or (b) 9 months from the date of purchase, whichever of the two occurs earlier.			
5	5th service between (a) 11500 - 12000 km or (b) 12 months from the date of purchase, whichever of the two occurs earlier.			
6	6th service between (a) 14500 - 15000 km or (b) 15 months from the date of purchase, whichever of the two occurs earlier.			

SERVICE RECORD SHEET

Sl.No.	Description	Odometer reading	Job card no. / Date	Servicing Dealer's stamp and sign.
7	7th service between (a) 17500 - 18000 km or (b) 18 months from the date of purchase, whichever of the two occurs earlier.			
8	8th service between (a) 20500 - 21000 km or (b) 21 months from the date of purchase, whichever of the two occurs earlier.			
9	9th service between (a) 23500 - 24000 km or (b) 24 months from the date of purchase, whichever of the two occurs earlier.			
10	10th service between (a) 26500 - 27000 km or (b) 27 months from the date of purchase, whichever of the two occurs earlier.			
11	11th service between (a) 29500 - 30000 km or (b) 30 months from the date of purchase, whichever of the two occurs earlier.			

TECHNICAL SPECIFICATIONS

MANUFACTURER : TVS MOTOR COMPANY LIMITED
P.B. No 4, Harita, Hosur - 635 109, India.

ENGINE

Type : Single Cylinder, 4 stroke, air cooled spark ignition engine
Cylinder bore : 51 mm
Stroke : 48.8 mm
Piston displacement : 99.7 cc
Compression ratio : 9.4 : 1
Carburettor : AW 17 Spaco, MJ-82, PJ42
Air filter : Paper filter with Polyurethane foam element
Lubrication system : Positive lubrication
Maximum power : 5.53kW @7000 rpm
Maximum torque : 8.2 Nm @5000 rpm
Maximum speed : Around 80 km / hr
Engine idling rpm* : 1400 ± 100 rpm
Starting system : Kick starter and Electric starter

TRANSMISSION

Clutch : Wet - Multi plate type
Transmission : 4 Speed constant mesh
Gear shift pattern : All up heel-toe shift (except Nigeria)
All down heel-toe shift (exclusive for Nigeria)
Primary transmission : Spur gears
Secondary transmission : Chain and sprockets

GEAR RATIOS

I Gear : 3.273
II Gear : 1.765
III gear : 1.238
IV gear : 0.958
Primary reduction : 3.722
Final reduction : 3.071

* Under warm condition

TECHNICAL SPECIFICATIONS



CHASSIS

Dimensions and weights

Overall length	: 2011 mm
Overall width	: 700 mm
Overall height	: 1050 mm
Ground clearance	: 160 mm
Wheel base	: 1250 mm
Steering angle	: 88°
Caster angle	: 25°
Frame	: Single cradle tubular frame
Kerb weight	: 106 kg
(with tool kit & 90% of fuel)	
Pay load	: 130 kg
Maximum laden weight	: 236 kg
Front suspension	: Telescopic oil damped
Rear suspension	: 5 step adjustable hydraulic shocks with rectangular swing arm
Trail length	: 65 mm

TYRE

Front tyre	: 2.75 x 17 - 4 Ply rating
Rear tyre	: 3.00 x 17 - 6 Ply rating
Tyre pressure	
Front	: 1.75 kg/cm ² (25 PSI)
Rear - Solo	: 2.00 kg/cm ² (28 PSI)
Rear - Pillion	: 2.25 kg/cm ² (32 PSI)

BRAKES

Front	: Hand operated, internally expanding 110 mm dia. drum
Rear	: Foot operated, internally expanding 110 mm dia. drum

ELECTRICALS

Ignition system	: DC Digital ignition (TCI)
Spark plug	: Champion PR-Z9HC&MICO UR4AC
Spark plug gap	: 0.6 - 0.8 mm
Magneto	: 12V, 60W (fly wheel magneto)
Battery	: 12V, 5 Ah
Earthing	: Negative terminal
Head lamp	: Round, 12V, 35/35W x 1

TECHNICAL SPECIFICATIONS

Tail /brake lamp	: 12V, 5/21W x 1
Turn signal lamps	: 12V, 10W x 4
Speedometer lamp	: 12V, 1.7W x 1
High beam indicator lamp	: 12V, 1.7W x 1
Neutral indicator lamp	: 12V, 1.7W x 1
Turn signal indicator lamps	: 12V, 1.7W x 2
Horn	: 12V, DC
Fuse	: 12V, 10A x 1

CAPACITIES

Fuel tank including reserve **	: 12 litres
Reserve	: 5 litres
Engine cum transmission oil and capacity	: 900 ml
Front fork oil and capacity	: IOC teleshockab oil, 145 ± 2.5 ml per leg

**Caution**

Using the bulb other than the specified rating can result in overloading of the electrical system or premature failure of the bulb.

**Note**

Specifications are subject to change without notice.

** *The fuel tank is not a measuring instrument and the capacity of fuel tank may slightly vary from the indicated capacity.*